SW-23000 PC to TV converter

Thank you for choosing the Sewell PC to TV converter. This manual describes the package contents, typical usage and basic troubleshooting steps. If you have any further questions, feel free to contact us at 801 356-2823

Package Contents:

PC to TV converter w/ integrated video/audio/power cable.
6' Audio/Video cable (Red, white, and yellow RCA cable)
User manual

Features:

Cross platform. Works with Windows, Mac, Linux
Supports resolutions of 640x480, 800x600, 1024x768
Simultaneous output to computer monitor, RCA composite, S-Video
Integrated power and audio cables
NTSC, PAL support

User Manual:

The Sewell PC to TV converter is the simplest solution for watching PC content on virtually any TV. With the 3-in-one cable and support for audio, you won't find a better solution to easily get your video content onto your TV.

Great for viewing videos stored on your computer or streaming over the internet.

Share recent vacation photos without having to crowd around the computer screen

Quickly share presentations on a TV or projector

Installation:

1. Connect the HD15 cable to the VGA port on your computer.
2. Connect the USB A Male connection to any free USB port.
3. Connect the 3.5mm connector to the headphone jack on your computer for audio.
4. (optional) Connect your computer monitor to the VGA out port on the adapter (monitor cable sold separately).
5. Connect the AV cable (red, white and yellow RCA) to your TV and to the adapter
6. (optional) Connect an S-video cable from the adapter to your TV (S-video cable sold separately).

Connection Diagram

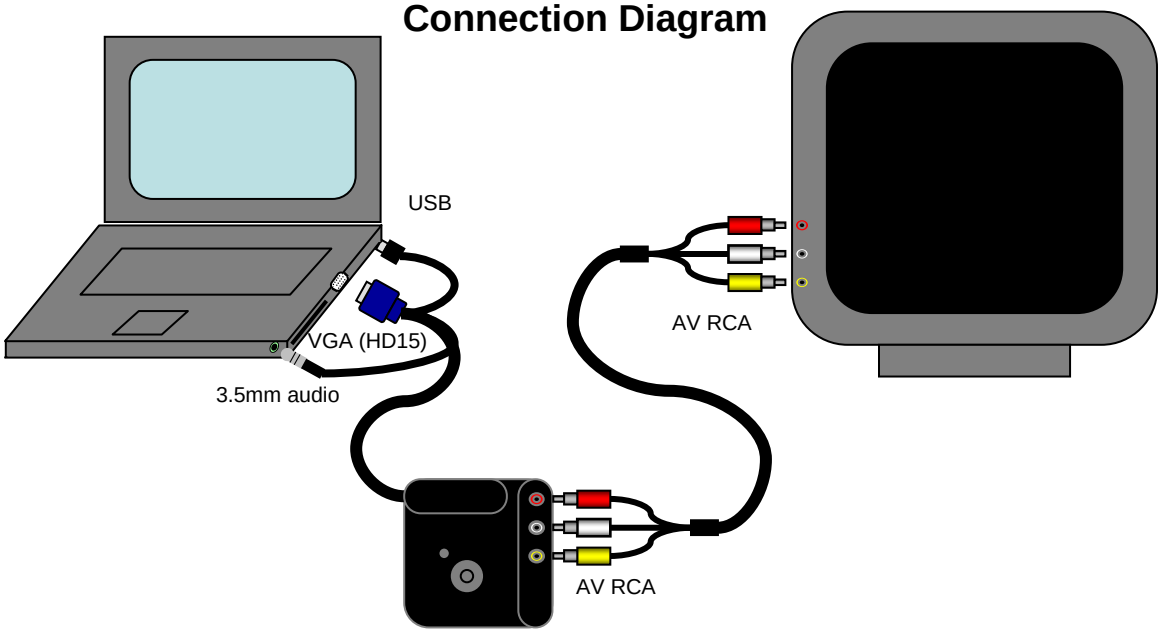

Settings and options:

Pressing the arrow keys shifts the image respectively to the left, right, upwards or downwards.

The zoom button magnifies the center of the screen, press again to return to normal view

Pressing the Menu button opens the on-screen menu. Use the directional arrows to navigate the menu.

Menu Options:

Note: use the ▲▼keys to move between menu options, and the ◄ ► keys to change menu settings.

HSIZE changes the horizontal size of the image
VSIZE changes the vertical size of the image
BRIGHTNESS adjusts the brightness of the picture
CONTRAST adjusts the contrast of the picture
HUE adjusts the hue of the picture
SATURATION Adjusts the color saturation of the picture
FLICK cycles through multiple settings to minimize the image flicker. Choose the option with the most stable image
SHARPNESS adjusts the sharpness of the picture
OSD BACKGROUND selects the on-screen menu background color

PAL/NTS Switches:

Switch 1	Switch 2	Switch 3	TV Standard
ON	ON	ON	**NTSC-M (North America)**
OFF	ON	ON	**NTSC-EIAJ (Japan)**
ON	OFF	ON	**PAL-M (Brasil)**
OFF	OFF	ON	**PAL-N (South America)**
ON	ON	OFF	**PAL-BDGHI (Europe)**
OFF	**OFF**	**OFF**	**PAL-Combination N**

Troubleshooting:

No Video: Check that all the cables are properly connected, to the computer and to the TV and that the TV is set to the correct input. Also ensure that your computer is outputting a compatible signal (1024 x 768 60Hz recommended) On a laptop computer you may need to use a Fn keyboard combination to output video

No Audio: Make sure that the cables are connected properly and that you are connecting to your computer's speaker or headphone output. (Usually green) Make sure that the volume is not muted in the computer settings.

Scrolling image: If the image is scrolling on your TV, check the NTSC/PAL setting is appropriate to your area and video equipment. Also check that you are using a compatible resolution. 800 x 600 or 1024 x 768

Sewell Development Corporation
To see this and other AV products online, visit:
SewellDirect.com
Part Number: SW-23000
801-356-3823
customerservice@sewelldirect.com